



1.2 Accessory and sold separately


1.2.1 Overall configuration diagram

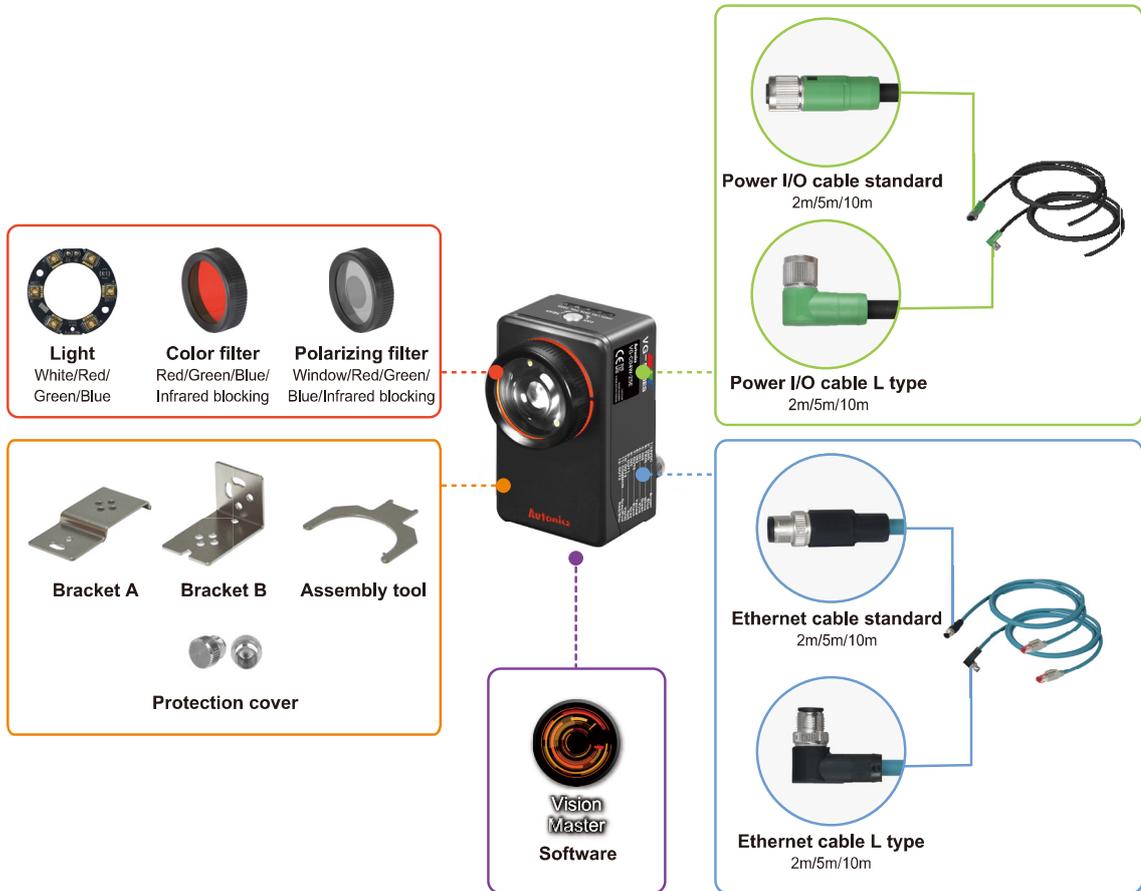

1.2.2 Accessory

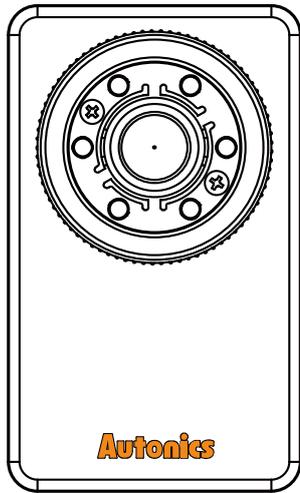


VG body

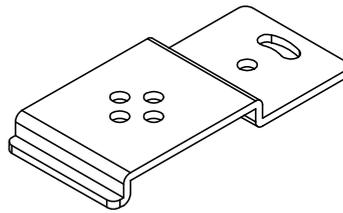


Bracket A



Mounting screw: 2

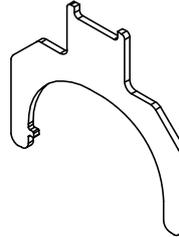

Assembly tool

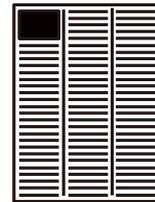

Instruction manual



Note

- Visit our homepage (www.autonics.com) to download vision sensor program (Vision Master).
- Before using the product, please check whether all accessories above are included. If there is a damaged or missing accessory, please contact Autonics sales team or retailer.



Note

Please refer to the model name below, when purchasing the lost accessory.

- Assembly tool



- Bracket A



1.2.3 Sold separately

- Light*

| | | | |
|---|------------------|--------------------|-------------------|
| LR-W-06-VG (white) | LR-R-06-VG (red) | LR-G-06-VG (green) | LR-B-06-VG (blue) |
|  | | | |

※Besides offered light, another type of lights are sold separately.

- Color filter

| | | | |
|---|---|--|---|
| FL-R-VG (red) | FL-G-VG (green) | FL-B-VG (blue) | FL-IC-VG (infrared blocking) |
|  |  |  |  |

- Polarizing filter

| | | | | |
|---|---|---|---|---|
| FL-P-VG (window) | FL-RP-VG (red) | FL-GP-VG (green) | FL-BP-VG (blue) | FL-ICP-VG (infrared blocking) |
|  |  |  |  |  |

- Power I/O cable

| | |
|---|--|
| CID-2-VG (length: 2m) CID-5-VG (length: 5m) CID-10-VG (length:10m) | CLD-2-VG (length: 2m) CLD-5-VG (length: 5m) CLD-10-VG (length:10m) |
|  |  |

- Ethernet cable

| | |
|---|---|
| CIR-2-VG (length: 2m) CIR-5-VG (length: 5m) CIR-10-VG (length:10m) | CLR-2-VG (length: 2m) CLR-5-VG (length: 5m) CLR-10-VG (length:10m) |
|  |  |

- Protection cover[※]

| |
|---|
| P96-M12-1 |
|  |

- Bracket B

| |
|---|
| BK-VG-B |
|  |

※Protection cover protects unused connectors from foreign substances.

When installing the protection cover, please tighten the cover with hand.

- Vision panel

| |
|---|
| APC-1011 |
|  |