Autonics

INTELLIGENT DISPLAY UNIT (RS485 Synchronous Communication Type for Time Display)

> **DS-C Series** INSTRUCTION MANUAL





Thank you for choosing our Autonics products. Please read the following safety considerations before use.

Safety Considerations

XPlease observe all safety considerations for safe and proper product operation to avoid hazards

XSafety considerations are categorized as follows.

∆Warning Failure to follow these instructions may result in serious injury or death. ▲Caution Failure to follow these instructions may result in personal injury or product damage

XThe symbols used on the product and instruction manual represent the following ↑ symbol represents caution due to special circumstances in which hazards may occur.

- 1. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster
- Failure to follow this instruction may result in personal injury, fire, or economic loss.
- 2. Do not disassemble or modify the unit. Please contact us if necessary. Failure to follow this instruction may result in fire.

▲ Caution

- 1. Do not use the unit outdoors.
- Failure to follow this instruction may result in shortening the life cycle of the unit or product malfunction
- 2. Use the unit within the rated specifications. Failure to follow this instruction may result in shortening the life cycle of the unit.
- 3. Do not use water or oil-based detergent when cleaning the unit. Use dry cloth to clean the unit. Failure to follow this instruction may result in fire.
- 4. Do not use the unit where flammable or explosive gas, humidity, direct sunlight, radiant heat, vibration, or impact may be present.
- ailure to follow this instruction may result in fire or explosion
- Keep dust and wire residue from flowing into the unit.
 Failure to follow this instruction may result in fire or product damage.

Model

1) Basic unit

Model	Display method	Size	
DS22-□C		W20×H33mm	
DS40-□C	7 Segment	W40×H60mm	
DS60-□C		W60×H96mm	


2) Expansion unit


	Model	Display method	Size	Model	Display method	Size
l	DS22-□E		W20×H33mm	DA22-□E		W20×H33mm
	DS40-□E	7 Segment	W40×H60mm	DA40-□E	16 Segment*1	W40×H60mm
	DS60-□E		W60×H96mm	DA60-□E		W60×H96mm

- X1: Use 16 Segment expansion unit for displaying delimiter for hour/min./sec. and 'M' character for
- ⋈□ indicates color: R(Red), G(Green)

Remove Of Protection Cover

To operate the function set switch of the DS40, DS60 models, you should remove the protection cover. Press the connection parts (4 points) of the protection cover at the top/bottom of the product with a flat-head screwdriver and the protection cover is removed





Device Synchronized Time Transfer Program (World Clock)

World Clock is time synchronization program for DS-C Series. You can check the desired world time zone or set summer time. For more information, please refer to the World Clock user manual. Visit our website (www.autonics.com) to download World Clock.

n	Item	Minimum specifications
	System	IBM PC compatible computer
	System	with Pentium III or above
	Operations	Windows 98/NT/XP/Vista/7/8/10
	Memory	256MB+
	Hard disk	1GB+ of available hard disk space
	VGA	Resolution: 1024×768 or higher
	Others	RS232C serial port (9-pin), USB port

XThe above specifications are subject to change and some models may be discontinued without notice.

Specifications

Madal	Basic unit	DS22-C	DS40-□C	DS60-□C		
Model	Expansion unit	D□22-□E	D□40-□E	D□60-□E		
Input meth	od	RS485 communication (Modbus protocol)				
Display co	lor	Red, Green (selectable by model)				
Power sup	ply	12-24VDC				
Allowable	voltage range	90 to 110% of rated vo	ltage			
Current	Red type	Max. 25mA	Max. 55mA	Max. 65mA		
consumption	Green type	Max. 20mA	Max. 40mA	Max. 45mA		
Character	size	W11.2×H22.5mm	W22.4×H40mm	W33.6× H60mm		
Time displa	ay	World local time, 12/24-hour, summer time supported				
The number	er of max. e connection	10 units				
Noise resis	stance	±500V the square wave noise (pulse width: 1μs) by the noise simulator				
Environ-	Ambient temp.	-10 to 55°C, storage: -25 to 65°C				
ment	Ambient humi.	35 to 85%RH, storage: 35 to 85%RH				
Accessory	Basic unit	Right/Left cap: 1 Connector: 1	_			
	Expansion unit	_	Ribbon cable (50mm): 1			
Protection	structure	IP40 (front part)				
Approval		CE				
	Basic unit	Approx. 58g (approx. 17g)	Approx. 63g (approx. 28g)	Approx. 110g (approx. 60g)		
Weight*1	Expansion unit	Approx. 92g (approx. 17g)**2	Approx. 63g (approx. 28g)	Approx. 110g (approx. 60g)		


- X1: The weight includes packaging. The weight in parentheses is for unit only.
- X2: This is 3 units' weight as packaging unit and the weight in parentheses is only unit weight.
- ironment resistance is rated at no freezing or condensation

RS485 communication specifications


Comm. protocol	Modbus RTU with 16-bit CRC	Comm. speed	4800, 9600, 19200, 38400bps
Connection type	Connection type RS485		5ms (fixed)
Application standard Compliance with EIA RS485		Start bit	1-bit (fixed)
Comm. address	226 (fixed)	Data bit	8-bit (fixed)
Comm. type	omm. type Two-wire half duplex		None (fixed)
Comm. distance	Max. 800m	Stop bit	1-bit (fixed)
Comm. distance	Max. 800m	Stop bit	1-bit (fixed)

Dimensions

1) DS22 XN: The number of units XPanel thickness: 1.5 to 4m




2) DS40

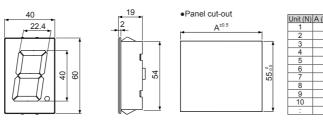

3) DS60

•D□22

Cap

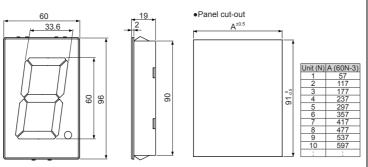

4) Accessory

5) Sold separately (middle bracket)



Connector



BK-D22R

Part Descriptions And Function Setting

Only the basic unit model has the function set switch and the input terminal.

The DS22 models have them at the side, and the DS40, DS60 models have them at the rear

①Expansion connector Using for connecting units Refer to '
Connection of units'


•DS22-□C

•DS40-□C



•DS60-□C

Unit (N) A (20N+11



@Function set switches ON_

S1 1 0 J2 1 0 S2 2 N J4 2 N S3 3 JB 3 J16 4

or r terminal setting							
JP1	Delimiter for hour/min./sec.						
(Open)	Sign [:] (using 16 segment expansion unit)						
(Short)	Period [·] (using 7 segment expansion unit)						

Switch setting						
No.	Switch OFF (■)/ON (■)	Function				
S1	24-hour 12-hour	12/24-hour settin				
S2	4800 9600 19200 38400 S2 II II II	Comm. speed				
S3	\$3 🖬 🖬 🔳	selection (bps)				
J1 to J16	UTC UTC UTC UTC -12:00 -11:00 +11:00+12:00 J1	World time zone selection*1				
V: 1 · I	Pofor to 'T World Time Zone'					

%1: Refer to '■ World Time Zone

No.	Code	Function		
1	VCC	12-24VDC		
2	GND	0V		
3	_	_		
4	A (+)	RS485 A (+)		
5	B (-)	RS485 B (-)		

※For DS22-□C connect the connector to input terminal

World Time Zone

X Select the desired world time zone by function set switches (J1 to J16) If communication is not connected when supplying the power, the unit displays the set local time zone

No.	Switch			F(E		Time Zone	Location	
	J1	J2	J4	J8	J16			
0	0	0	0	0	0	UTC-12:00	International Date Line West	
1	0	0	0	0	1	UTC-11:00	Coordinated Universal Time -11	
2	0	0	0	1	0	UTC-10:00	Hawaii	
3	0	0	0	1	1	UTC-09:00	Alaska	
4	0	0	1	0	0	UTC-08:00	Pacific Time(US&Canada), Baja California	
5	0	0	1	0	1	UTC-07:00	Mountain Time(US&Canada), Arizona, Chihuahua, La Paz, Mazatlai	
6	0	0	1	1	0	UTC-06:00	Guadalajara, Mexico City, Monterrey, Saskatchewan, Central America Central Time(US&Canada)	
7	0	0	1	1	1	UTC-05:00	Eastern Time(US&Canada), Indiana(East), Bogota, Lima, Quito, Rio Branco, Chetumal	
8	0	1	0	0	0	UTC-04:00	Atlantic Time(Canada), Asuncion, Georgetown, La Paz, Manaus, San Juan, Cuiaba	
9	0	1	0	0	1	UTC-03:30	Newfoundland	
10	0	1	0	1	0	UTC-03:00	Greenland, Montevideo, Buenos Aires, Brasilia, Santiago, Salvador Cayenne, Fortaleza	
11	0	1	0	1	1	UTC-02:00	Coordinated Universal Time -02	
12	0	1	1	0	0	UTC-01:00	Cabo Verde Is., Azores	
13	0	1	1	0	1	UTC 00:00	Coordinated Universal Time, Dublin, Edinburgh, Lisbon, London, Monrovia, Reykjavik, Casablanca	
14	0	1	1	1	0	UTC+01:00	Belgrade, Bratislava, Budapest, Ljubljana, Prague, Brussels, Copenhagen Madrid, Paris, Windhoek, Sarajevo, Skopje, Warsaw, Zagreb, West Centra Africa, Amsterdam, Berlin, Bern, Rome, Stockholm, Vienna	
15	0	1	1	1	1	UTC+02:00	Damascus, E.Europe, Beirut, Athens, Bucharest, Amman, Jerusalem, Istanbul, Cairo, Kaliningrad, Tripoli, Harare, Pretoria, Helsinki, Kyiv, Riga, Sofia, Tallinn, Vilnius	
16	1	0	0	0	0	UTC+03:00	Najrohi Mascow St Patershura Valgograd Minek Raghdad	
17	1	0	0	0	1	UTC+03:30	Tehran	
18	1	0	0	1	0	UTC+04:00	Baku, Abu Dhabi, Muscat, Yerevan, Izhevsk, Samara, Tbilisi, Port Louis	
19	1	0	0	1	1	UTC+04:30	Kabul	
20	1	0	1	0	0	UTC+05:00	Ashgabat, Tashkent, Ekaterinburg, Islamabad, Karachi	
21	1	0	1	0	1	UTC+05:30	Sri Jayawardenepura, Chennai, Kolkata, Mumbai, New Delhi	
22	1	0	1	1	0	UTC+05:45	Kathmandu	
23	1	0	1	1	1	UTC+06:00	Novosibirsk, Dhaka, Astana	
24	1	1	0	0	0	UTC+06:30	Yangon(Rangoon)	
25	1	1	0	0	1	UTC+07:00	Bangkok, Hanoi, Jakarta, Krasnoyarsk	
26	1	1	0	1	0	UTC+08:00	Beijing, Chongqing, Hong Kong, Urumqi, Ulaanbaatar, Irkutsk, Kuala Lumpur, Singapore, Taipei, Perth	
27	1	1	0	1	1	UTC+09:00	00 Seoul, Yakutsk, Osaka, Sapporo, Tokyo	
28	1	1	1	0	0	UTC+09:30	Darwin, Adelaide	
29	1	1	1	0	1	UTC+10:00	Guam, Port Moresby, Magadan, Brisbane, Vladivostok, Canberra, Melbourne, Sydney, Hobart	
30	1	1	1	1	0	UTC+11:00	Solomon Is., New Caledonia, Chokurdakh	

Display Example Of Delimiter For Hour/Min./Sec.


	,		
Delimiter for hou	r/min./sec.	Displaying 24-hour	Displaying 12-hour ^{*1}
Sign [:] (using 16 seg.	Hour/Min.	88888	888888
expansion unit)	Hour/ Min./Sec.	8888888	88888888
Period [·]	Hour/Min.	8888	88888
(using 7 seg. expansion unit)	Hour/ Min./Sec.	888888	8888888


XUse 16 Segment expansion unit for 'M' character for AM/PM when displaying 12 hours time.


Connection Of Units

- Connect a basic unit, expansion units from the left and connect the caps the end of right and
- The middle bracket (sold separately) helps to protect deflection when connecting over 7 units. Use one middle bracket per 7 units.
- The basic unit supplies the power for expansion

units and DATA input.








below 0.5N·m.

XYou can use both the 7 segment model and the 16 segment model mixed.

Communication Setting

1) Application of system organization



SCM-US48I (USB to RS485 converter, sold separately), SCM-38I (RS232C to RS485 converter, sold separately)

E.g.) Seoul +1 hour (0b01001010)

Please use twist pair wire for RS485 communication 2) Modbus Address Mappin No(Address) | Func | R/W | Description | Setting range 400001 (0000) 0x90 W UTC universal Hour (high byte), Min. (low byte) 400002 (0001) 0x90 W time Sec. (high byte), 1/100 sec. (low Sec. (high byte), 1/100 sec. (low byte) 400003 (0002) 0x90 W Configuration: 1-byte (summer time setting) +1-byte (summer time setting) 400004 (0003) | 0x90 | W Summer time setting: local code (5-bit)* 400005 (0004) 0x90 W +summer time (3-bit) 400006 (0005) l0x90 W Summer time | +30 min. | +1 hour | -1 hour | -30 min. 400007 (0006) 0x90 W 3-bit 001 (1) 010 (2) 011 (3) 100 (4) Available up to max. 16 locals 400008 (0007) 0x90 W For displaying summer time, transfer the local data 400009 (0008) 0x90 W and summer time data also

※1: For local code (5-bit), refer to '■ World Time Zone'.

Cautions During Use

1. This unit must be mounted on the Panel.

400010 (0009) 0x90 W

- 2. This is non-insulated product. Use insulated power for power supply. 3. Input signal line
- ①Shorten the cable distance between the external device and this product
- ②Use shield cable when input wiring is long.
- Wire the input signal line separately from the power line.4. Dielectric or insulation resistance test when this unit is installed in the control panel.
- ①Separate the unit from the control panel. ②Short circuit all terminals of the unit.
- 5. Do not use this unit at below places. ①Place where there are severe vibration or impact.
- ②Place where strong alkalis or acids are used
- 3 Place where there are direct ray of the sun
- ④Place where strong magnetic field or electric noise are generated
- Installation environment 1 It shall be used indoor ②Altitude max. 2.000m ③Pollution degree 2

4 Installation category I *Failure to follow these instructions may result in product damage

■ Major Products

- Terminal Blocks & Cables
 pper Motors/Drivers/Motion Controllers

- 31 1 1 1 1 UTC+12:00 Coordinated Universal Time +12, Anadyr, Petropavlovsk-Kamchatsky, Auckland, Wellington, Fiji

18, Bansong-ro 513beon-gil, Haeundae-gu, Busan, South Korea, 48002

■ HEADQUARTERS:

Corea, 40002

OVERSEAS SALES:
#402-303, Bucheon Techno Park, 655, Pyeongcheon-ro,
Wonmi-gu, Bucheon, Gyeonggi-do, South Korea,14502
TEL: 82-32-610-2730 / FAX: 82-32-329-0728

Autonics Corporation

Trusted Partner In Industrial Automation

EP-KE-13-034